

Just Blinds & Curtains

Measuring For Roman Blinds

Blinds may be fitted either inside or outside the window recess. If a blind is being fitted inside a recess, please quote 'recess size' we will make an adjustment for a perfect fit at the time of manufacture.

If a blind is being fitted outside a recess, please quote 'blind size' the blind will then be manufactured to the size quoted.

If more than one blind is being fitted on the window please quote the size of each individual blind rather than the overall recess size.

If the window opens inwards it would be best to fit outside recess

Measuring For Inside Recess Fitting


When measuring the window recess

Always use a metal tape measure.

Measure the width and the drop in at least three positions, taking account of any protrusions such as tiles and dado rails.

Make a note of the smallest width and drop measurement.

Please quote width and drop sizes stating 'recess size' .

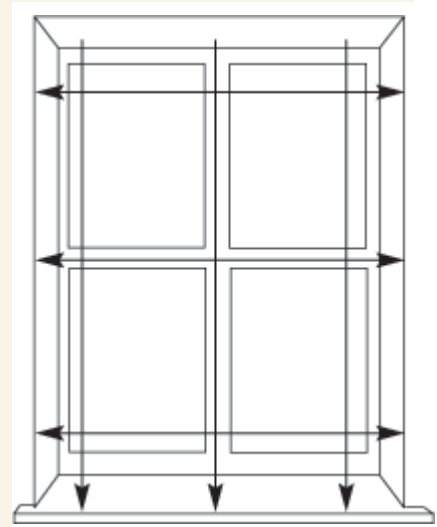

Measuring For Outside Recess Fitting

When measuring outside a window recess

Always use a metal tape measure

Allow the blind to extend at the least 5cm either side and 10cm above and 5cm below the window.

Make a note of the smallest width and drop measurement.

Please quote width and drop sizes stating 'outside recess size'

